




SAFETY RULES

- Do not connect loads with a power greater than the permissible one.
- Connect in accordance with the scheme presented in the manual. Incorrect connection can be dangerous, it can result in damage to the controller and loss of warranty.
- DANGER! Danger to life due to electric current (also with the device off), voltage may be present at the outputs. All assembly work should be carried out ALWAYS with the circuit disconnected power.
- Connecting the device to the power grid without the quality requirements specified in the standard PN-EN 50160 results in the loss of warranty.

CONNECTION DIAGRAM

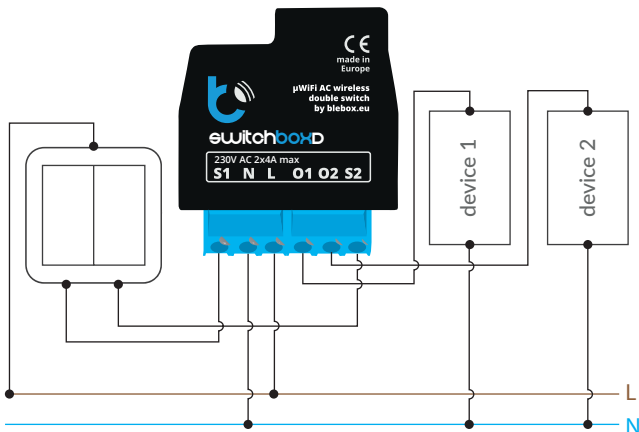

1 INSTALLATION - BASICS

- Before installing the controller, disconnect the voltage in the powered circuit. Remember that all assembly work should be performed with the power supply disconnected (switching off the mains fuse or disconnecting the power cord from the socket).
- The controller should be mounted in a place protected against unfavorable environmental conditions, protected against access by third parties - in a flush-mounted box or inside the housing of the controlled device. Remember that metal elements (cables, housing parts) negatively affect the range of the device, and thus the comfort of use. It is advisable that the device be fixed in a stable and stationary position. Due to the operating voltage of the device, it is necessary that the connectors in the controller are protected against accidental touching or short circuits that may result in electric shock or damage to the device.
- Familiarize yourself with the scheme and then proceed to the installation of the controller. Pay particular attention to the labeling of the controller connectors. Start by connecting the power wires - phase L (brown) and neutral N (blue). Then

connect the load. If you decide to use local control from a wall switch, also connect the switch as shown in the diagram. For control via smartphone or tablet only, no wall switch is required.

- The controller supports all types of monostable double switches (so-called bell switches). The sequence of connecting the S1 / S2 input to the right / left switch button does not matter at the installation stage - it can be set at a later stage of the controller configuration.
- After making sure that the device has been connected in accordance with the diagram and that there are no metal elements near the controller that could accidentally short-circuit the contacts, turn on the device by switching on the power supply (switching on the mains installation fuse or connecting the power cord to a socket).

2 FIRST START

- Unlock your phone or tablet and download the **free wBox application**. If you have an Android device, the application can be found in the Play store. For iOS devices, the application is available in the App Store. The Windows Phone app can be downloaded from the Windows Phone Store.
- Using a mobile phone or tablet, connect to the device's wireless network. To do this, enter the settings of your smartphone or tablet, then to the configuration of the WiFi network and find the network called "switch-BoxD-xxxxxxxx" where xxxxxxxx is the serial number of the device. Connect with this one network.
- Turn on the wBox application. You will see your device at the top of the screen. To add it to the application, click "+" on the right side, next to the name. To preliminarily configure the driver, click on the default device name.



You can also configure it using the phone/tablet web browser. After connecting with the wireless network of the controller, turn on the browser and go to the website: <http://192.168.4.1>

- Test the operation of the controller by clicking the ON / OFF button, paying attention to connected load behaviour. If you connected a wall switch, check its operation. In the default configuration for monostable buttons (so-called bell buttons), holding the button key should turn on the load, releasing the button will turn the load off. To change this behaviour, go to settings (button "Settings" in the upper right corner of the screen) and then in the option "set actions for input", for the corresponding action (you can set up a maximum of 10 actions for the button) select the appropriate action type for the given trigger. For example, to alternately turn the light on / off with the monostable button each time it is pressed, select the action type as "change state" and select "short press" as the trigger.
- Also, check the selection in the "state after reboot" which determines the method behaviour of the controller after a restart caused by e.g. a break in the supply of electricity. You can choose if the load should stay on, off, stay in the pre-reboot state (if it was on it should remain turned on, if it was turned off, it must remain turned off), or take the opposite.

3 ACCESS POINT AND WIFI NETWORK SETTINGS

- After the first start-up of the controller, you can proceed to its further configuration. Being connected to the WiFi network emitted by the device, on the control panel of the wBox application, select the device, then go to settings (the "Settings" button in the upper right corner of the screen).
- You can change the name of the device under which it is displayed in the application wBox. In addition, you can change the name and password of

the generated WiFi network. Remember that changing the network name or password will disconnect from the device immediately after clicking the "save" button, so you should connect to the device using the newly assigned network name and password.

- You can connect the controller to your home WiFi network to control it with it from anywhere in the world. For this, in the section "connect" in settings, select the network name from the list and press "connect". If required, enter the WiFi network password. When connecting the controller to the network home, the phone / tablet may be disconnected from the device's network. In this case, it will be required to reconnect the phone / tablet to the controller's network.
- Remember that in order to control the device from outside the local WiFi network, from anywhere in the world, through the wBox application, the option "enable remote access" in the controller must be set to "yes".
- After completing the WiFi network configuration, you can disconnect from the controller network and connect the phone / tablet directly to the home WiFi network. Control from the wBox application will work in the same way as in the situation when the phone / tablet is connected to the controller network. If the user leaves the local network, e.g. when leaving home or by attaching mobile data, the wBox application will be there signaled this state as "remote mode". In this case, devices can be controlled, but setting options are not available for safety reasons.

TECHNICAL SPECIFICATIONS

Supply voltage	230V
Power consumption	below 1W
Number of outputs	2
Output type	relay
Maximum current (total)	10A
Maximum current (channel)	5A
Maximum load	2000W
Number of inputs	2
Input type	logical, short-circuited to N
Input voltage	230 V
housing	made of halogen-free polyurethane composition, self-extinguishing for thermal class B (130°C)
Galvanic isolation	no
IP class	IP20
Dimensions	40 x 48 x 20 mm
Transmissiom	Bi-directional,with confirmation, encrypted
Transmission frequency	2.4 GHz
µWiFi transmission standard	compatible with WiFi, 802.11g
Communication mode	direct connection (as an Access Point), WiFi connection via a standard router, connection with access from anywhere in the world (only Internet access required)
Compatible devices and systems	Apple iPhone, Apple iPad, iPad Mini, Android, computer and mobile devices supporting HTML5

ADDITIONAL INFORMATION

LOCATION AND TIME OF THE DEVICE, SCHEDULE

The controller can work according to a given schedule. To do this, you need to set the device time. Go to settings in the section "Device time" and click the "change zone" button. Then select your region and location from the list, confirming the selection with the "save" button. The device will synchronize its time with the time server (if the controller is in the WiFi network with Internet access) or download time from your phone/tablet. It is recommended that the controller is always connected to the WiFi network with Internet access so that it can automatically synchronize its clock.

To be able to control devices based on local sunrise and sunset, you should also choose a location for the driver. The location of the driver you can define with your smartphone or tablet. by phone/tablet. In the "device location" section, click the "set locations" button. The browser will ask whether to share the location - allow. In the "coordinates" field the approximate coordinates of your location should appear. If the button "set locations" flashes red with the word "error", or the field "coordinates" does not change the value from "not set" to numerical data, there was a failure in getting the location. You should then make sure that the phone/tablet has a GPS module and whether the location sharing service is turned on on the phone.

The schedule entries are added by clicking the "add" button in the "Schedule" section of the settings. You can select the days on which the given task, type of entry (at a specific time, or relatively to sunrise/sunset times - only when correct location) and set task parameters. Set tasks will be visible in the form of a list, individual entries can be edited or deleted.

SOFTWARE UPDATE

To update the software in the driver, connect the driver to the home WiFi network (see "Access point and network settings" section WiFi) connected to the Internet. Go to settings (button "Settings" in the upper right corner of the screen) and click the "download new software" button software in the final section of the settings. Wait for approx. one minute, do not close the interface or take any other actions. The device will download the latest software. You can read the software version number, hardware version and device identifier on the very bottom of the settings screen.

for more information visit our website www.blebox.eu

www.blebox.eu

or send us an email to: info@blebox.eu
support is available at support@blebox.eu

made in Eurpe



proudly made by
blebox

